

GENERAL FEATURES

Ayvaz KP-01 Capacitive Level Controller works according to capacitance measurement principle. It is used to display continuous levels in conductive and non-conductive liquids. KP-O1 comprises a level transmitter which is integrated into the electrode that produces a standard analog signal of 4-20mA. Analog output of 4-20mA can be monitored from the display located on the panel protection box. KP-01's display both 4-20mA analog output and liquid level as percentage in tank or the boiler. A specially designed and wingletfit cooling pipe is used for heat insulation of the electrode.

Capacitance measurement principle is used to indicate the level. Electrode rod and vessel wall form a capacitor. It is basically based on the fact that the value of a capacity is affected by dielectric value of the substance between the plates and from the plate areas, as well as from the distance between them. As the area of the electrode and tank wall is fixed, the only variable thing is the substance inside the tank which plays a dielectric role.

If the level of such dielectric substance changes, the current running through the plates would change proportionately, as well. A dielectric is defined as an insulating substance which keeps many liquids such as water outside.

Dielectric constant of air and vacuum is 1 while it is bigger than 1 for other substances and therefore, capacity changes in line with the change in amount of the substance inside the tank. In order to obtain a useful result of measurement, measuring rod (dip stick) dipped at various depths into liquids must be insulated entirely. After zero point measuring range is adjusted, level can be read through the display unit.


Application Areas

- Steam Boilers
- Supply Tanks
- Concrete Tank
- Plastic Tanks
- Chemical Industry
- Food IndustryMarine
- Pharmautical Industry


PRODUCT	FEATURES	
Body	AISI 316 Ti	
Elec. Box	Aluminium	
Flange	Forged Steel	
Electrode	AISI 316 Ti	
Electrode Insulation	PTFE	
Connection	3/4" BSP / DN32-50 PN40 Flanged	
Intermediate Disc	PTFE	
Max. Working Temp.	238°C	
Max. Working Pressure	32 Bar	
Thermal Fuse	115°C	
Supply	230 V (Opt. 115V, 24V)+ %10, 50-60 Hz	
Power Consumption	5 VA	
	Degree 1: Water > 0.5 μS	
Precision	Degree 2: Water >0.20 Ms	
	Degree 3: Fuel oil or 2,3	
Output	4-20 mA Analog and Proportional	
Protection Class	IP44	

Working Principle:

To define electrical capacity, we assume that two conductive plates are used;

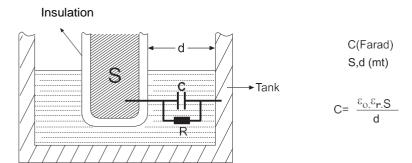

Due to leakage currents and the distance (d) between tank and probe is relatively high, above equation is not practical to use. Therefore, instead of electrical capacity, impedance measurement will provide accurate level results.

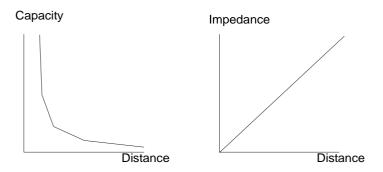

Impedance is $Z = R + jL\omega + (j\omega)^{-1}$. R is defined as reel component and represents the medium conductivity.

jLw is the second component and defined as inductive reactance. This component is ignored. Hence, the chance of extra error due to electrostatic measuring is removed. Findal impedance formula becomes as follow Z= R + (jC φ -1. The capacitive level measurement we manufacture works on the transfer of electrical charges principle. Total impedance is defined as Z=V / I.

I (Current) I=Q / t Q (Coulomb)

t (sn)

 $(jC\omega)$ -1 is the capacitive reactance we want to measure. So, electrical charges and impedance are on the same phases. In brief, electrical charges flowed into medium are directly proportional with capacitive reactance. For coaxial sensor:

a= Radius of electrod


b= Radius of insulated electrod

L= Length


Impedance can be defined as follows: $\frac{2.\pi . \varepsilon_0 . \varepsilon_r}{\ln (b/a)}$.

Excitation applied between 10KHz.250KHz based on length for all our models $\omega = 2 \times p \times f$) Linearity error that may be caused by conductivity component (R) effect is prevented by electronic circuit design and mechanical design. Reduced to a level lower than 1ppm, acceptable as zero.

TECHNICAL SPECIFICATION - THREADED

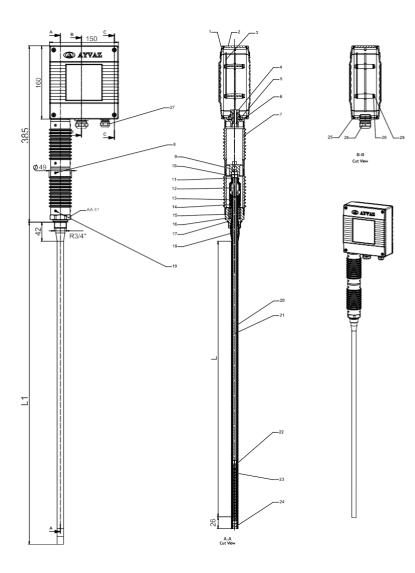


L (mm)	L1 (mm)	
300	373	
400	477	
500	583	
600	688	
700	794	
800	899	
900	1004	
1000	1110	
1100	1214	
1200	1319	
1300	1423	
1400	1528	
1500	1636	
2000	2156	




	Part No / Name	Material
I	Cover	Aluminium
2	Board Body	Aluminium
3	Control Board Circuit	Stripboard
4	Board Connection Bolt	8.8
5	Bolt Gasket	Lastik
6	Heat Insulation Pipe Cover	Castermid
7	Heat Insulation Pipe	Aluminium
8	Rivet	
9	Heat Insulation Pipe Connec.	Castermid
10	A.K.B. Nut	
11	Washer	
12	Electrode Fixing Bolt	AISI 316
13	Electrode Fixing	Peek
14	Spring Pressure Bear	AISI 304
15	Electrode Pressure Spring	AISI 302
16	Electrode Body	AISI 316Ti
17	Electrode Body Gasket	AISI 304
18	Fixing Part	AISI 316
19	Rivet	Ø2x4
20	PFA Insulation	PFA
21	Electrode Pipe	AISI 316Ti
22	Wire Cover	Teflon
23	Wire	Weld Wire
24	Stopper	PFA
25	Board Cover Gasket	Silicon
26	Raccord	
27	Raccord	
28	Washer	
29	Cylindrical Head Bolt	
30	Gasket	
31	Countersunk Bolt	

TECHNICAL SPECIFICATION - FLANGED

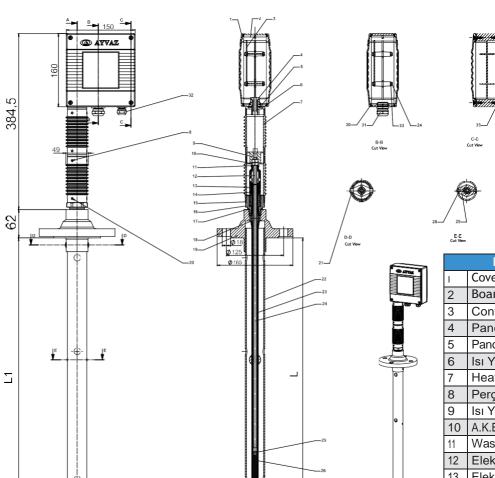

L (mm)	L1 (mm)	
275	316	
375	420	
475	526	
575	631	
675	737	
775	842	
875	947	
975	1053	
1075	1157	
1175	1262	
1275	1366	
1375	1471	
1475	1579	
1975	2099	

	Part No / Name	Material
I	Cover	Aluminium
2	Board Body	Aluminium
3	Control Panel Circuit	Stripboard
4	Panel Connector Bolt	8.8
5	Pano Bağlantı Cıvata Contası	Lastik
6	Isı Yalıtım Borusu Kapağı	Castermid
7	Heat Isolation Pipe	Alüminyum
8	Perçin	
9	Isı Yalıtım Borusu Ara Parça	Castermid
10	A.K.B. Nut	
11	Washer	
12	Elektrod Sabitleme Cıvatası	AISI 316
13	Elektrod Sezgi Sabitleyicisi	Peek
14	Yay Baskı Yatağı	AISI 304
15	Elektrod Baskı Yayı	AISI 302
16	Elektrod Gövdesi	AISI 316Ti
17	Elektrod Gövde Contası	AISI 304
18	Sabitleme Parçası	AISI 316
19	FLANŞ DN50 PN40	C 22,8
20	Perçin	
21	Perçin	
22	Muhafaza Borusu	AISI 304
23	PFA Kılıf	PFA
24	Elektrod Sezgi Çubuğu	AISI 316Ti
25	Tel kılıfı	Teflon
26	Wire	Weld Wire
27	Тара	PFA
28	Perçin	
29	Merkezleme Parçası	PFA
30	Pano Kapak Contası	Silicon
31	Raccord	
32	Raccord	
33	Washer	
34	Silindirik Başlı Cıvata	
35	Gasket	

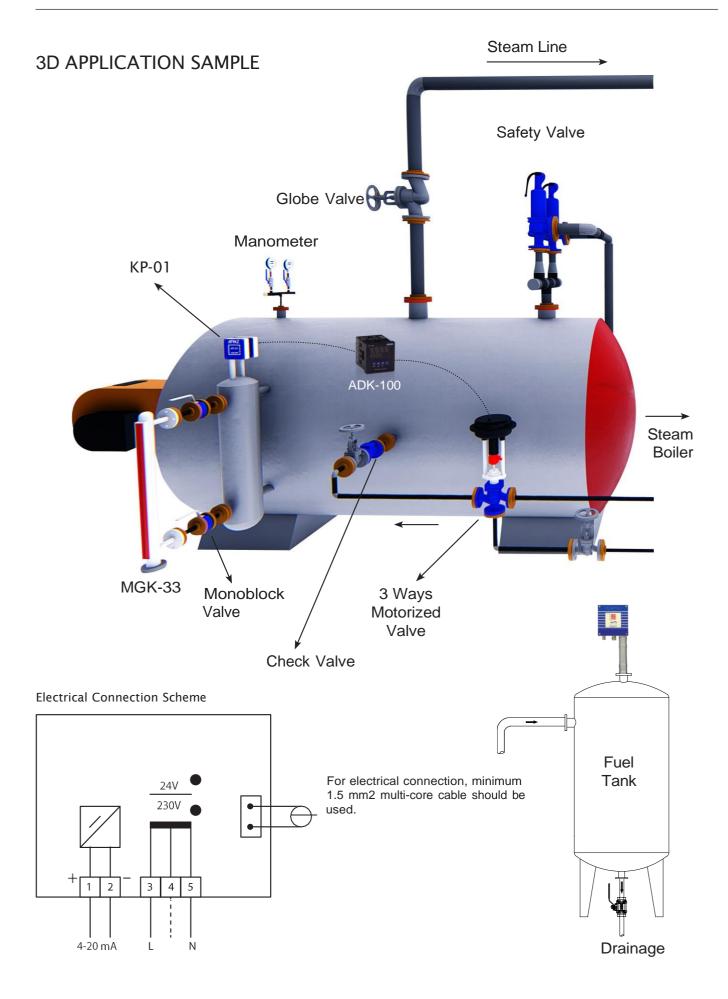

KP-01

GALAXY CAPACITIVE LEVEL ELECTRODE



HEAD OFFICE - FACTORY

Atatürk Sanayi Bölgesi Hadımköy Mahallesi Mustafa İnan Caddesi No: 44 Arnavutköy - İSTANBUL Tel: +90 212 771 01 45 (pbx) | Fax: +90 212 771 47 27 info@ayvaz.com | www.ayvaz.com